
# TRANSPROYPLUS HOBBY

# **HEAT PRESS USER'S GUIDE**

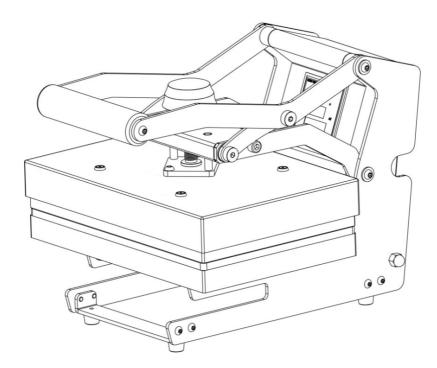



www.ProWorldInc.com

Pro World Inc. 961 Bethel Ave. Pennsauken, NJ 08110

Toll Free 800-678-8289 Outside U.S. 856-406-1020 Fax 856-406-1025

# **TECHNICAL PARAMETERS & OPPERATION INSTRUCTIONS**

#### 1. Technical Parameters

1. Model NO: MP351

2. Machine Size: L47\*W23\*H39cm

3. Heater Size: 9"\*12"

4. Lower Platen Size: 9"\*12"

**5.** Voltage: 220V/110V

6. Power: 700W

7. Time Range: 0~999S

**8.** Maximum Temp: 221°C/430°F **9.** Packing Size: 46\*38\*35cm

10. Gross Weight: 14kg

## 2. Temperature & Time Setting



Turn on power switch, control boardshows as picture.



Press set button first time, the PV part shows "sp". Press arrows "△" or "∇" to set temperature.



Press SET button second time, the PV part shows "st". Press arrows " $\triangle$ " or " $\nabla$ " to set time.

# 3. Celsius (°C) & Fahrenheit (°F) Settings



Press " $\triangle$ " and " $\nabla$ " once time, control board shows as picture.



Press "△" to input 88 as picture



Press SET button to enter into next interface, then press SET to choose the "ctr" interface as picture, press "△" and "▽" to change "SV" no as 0(for Celsius) or 1(for Fahrenheit). press SET 4 seconds to quit.

# 4. Temperature Compensation Setting




press **SET** button 4 seconds to enter into interface as picture.



press SET to choose "pb" interface as picture,then Press "△" and "▽" to set temperature compensation numbers. For example,if the real temperature is 15 °C higher than control board shows,pls input +15 into the AV part,if the real temperature is 15 °C lower than control board shows,pls input -15 into the AV part. press SET 4 seconds to quit.

# **WIRING SCHEMATIC**

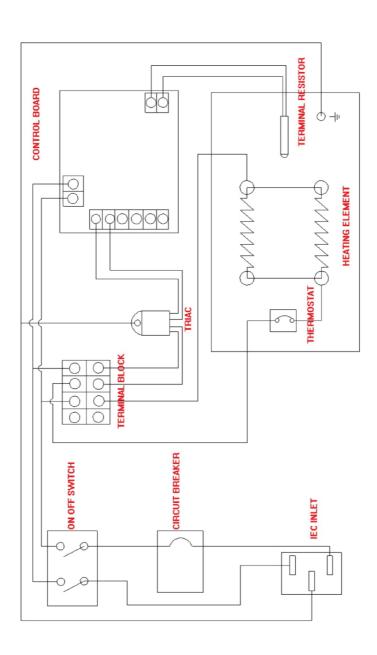

## TRANSPRO WARRANTY

### **Warranty Coverage**

TransPro products offered by Pro World are warranted against defects in material and workmanship. Warranty is void if equipment has been damaged by accident, unreasonable use, neglect, unauthorized and/or improper service, or other causes not arising out of defects in material and workmanship. This warranty does not cover damage caused by normal wear and tear, neglect or lack of proper maintenance. This warranty is for the original purchaser/owner only, it is not transferable.

## **Warranty Duration**

The heating element shall be warranted for the life of the heat press. There is a one (1) year warranty on major components, circuit boards and all other components.

## **Warranty Performance**

During the warranty period, and in the event that a situation cannot be resolved by telephone/email and upon PRE-AUTHORIZATION from Pro World equipment must be shipped, freight prepaid to Pro World for service in the original packaging. After 30 days, all shipping and insurance expenses to and from Pro World of in-warranty equipment is solely the responsibility of the customer. Prior to 30 days the shipping costs will be refunded if Pro World deems the equipment to be defective as stated. Pro World cannot be held responsible for improper handling or any other damage incurred in transit. No charge will be made for labor and components for repair of in-warranty equipment. OUT-OF WARRANTY machines will be charged at the repair rates in effect at the time the machine is received.

# **Warranty Disclaimers**

Pro World shall not be liable for loss of use of TransPro equipment or other incidental or consequential costs, expenses, or damages incurred by the original purchaser or any other user. The above warranty provisions constitute the entire agreement between all parties, and supersede any and all prior written and/or oral representations and understandings.

This "Limited Warranty" applies to all TransPro equipment. However, the procedure for obtaining service may vary outside the continental United States. Contact your Pro World representative for warranty information. The purchaser is responsible for compliance with all local laws, regulations and measure. Agreement shall be governed by and construed in accordance with all applicable laws of said region.



#### www.ProWorldInc.com

Pro World Inc. 961 Bethel Ave. Pennsauken, NJ 08110

Toll Free 800-678-8289 Outside U.S. 856-406-1020 Fax 856-406-1025